Crown Water Vortex Flow Control

Crown Water Vortex Flow Control Fixing Instructions

General Arrangements

- The Vortex Flow Control is a surface water regulator.
- It is installed in a control chamber, mounted over the Outgoing pipe (minimum outlet pipe is advised on the units quotation)
- A Flat Surface is required for mounting the Unit unless the unit has been ordered with a curved backplate. If you are not using a curved backplate, it is necessary to build up a concrete mounting pad around the outgoing pipe large enough to accommodate the unit.
- A sump is required below the outlet pipe with the depth advised on quotations this depth should be sufficient to house the unit intake and allow drilling and fixing of the unit.

Fixing Arrangements

- 1) Offer up the unit to the mounting area in the orientation shown
- 2) The bottom of the outlet spigot should be resting on the pipe invert
- Mark through the fixing bolt holes and drill the holes for the Anchor Bolts with a 10mm Drill Bit
- 4) Insert Anchor Bolts in holes and secure
- 5) Where a bypass door is fitted, lead the pull wire to the chamber access and secure within easy reach

Crown Water Ltd Index House Ascot SL5 7ET Tel 01344 886996 Fax 01344 885986 sales@crownwater.com **Registration Number** 09514593

